iSmart Laundrette

Your Laundry Done Smarter

WASHING GUIDE

GET THE BEST WASH


Speed Queen®

1.




Before loading, check pockets for any loose items.

2.

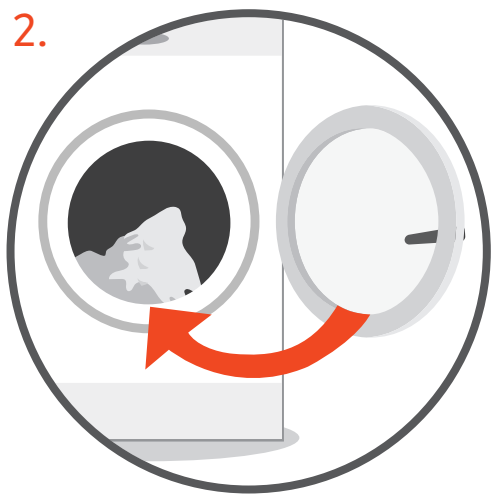


Load washer and close the door.

3.

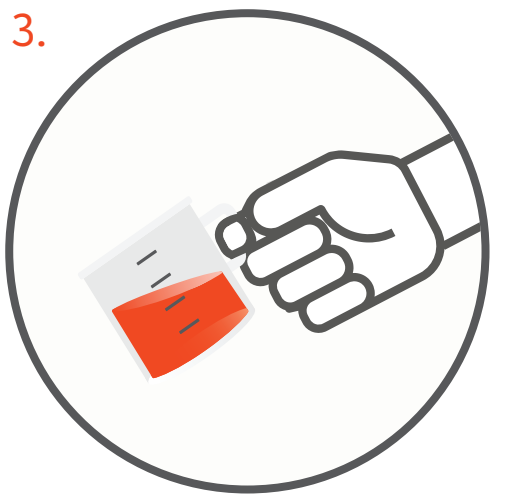

Add detergent and softener / bleach to dispenser.

4.

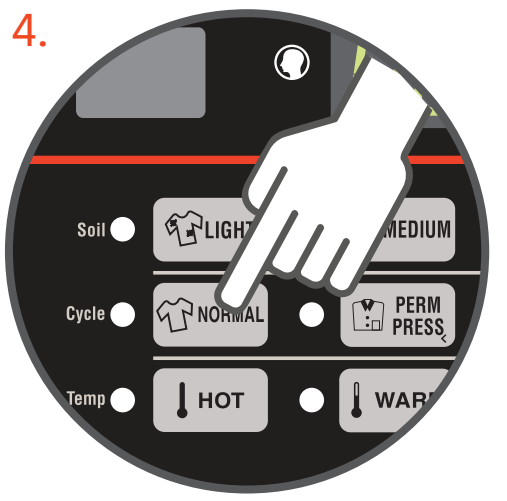

Select wash cycle. For what wash cycle to use, see below chart.

NOTICE

High Efficiency laundry detergent is recommended for best performance.

If using a non-HE detergent, avoid oversudsing by using only 1/2 of the detergent manufacturers recommended amount.

FRONT LOAD WASHERS DETERGENT

Machine#2 #3 #4 #5	#1 #6 #7 #8 #9	#10 #11	#12 #13
			
1/4 CUP	1/4 CUP	1/3 CUP	1/2 CUP
2 BASKETS	3 BASKETS	4 BASKETS	6 BASKETS
9–9.5 kg	14 kg	18 kg	27 kg

5.



Make a payment by tapping or swiping.

OR



Insert coins $1 or $2 if fitted.
Machine #
1 - 2 - 3 - 4 - 5 - 6 - 10

OR



Pay with your Smart Phone APP!
Loyalty Program Available




Simply download the **Speed Queen** app and follow the prompts.



Wait for pay approval.

WHAT WASH CYCLE DO I USE?

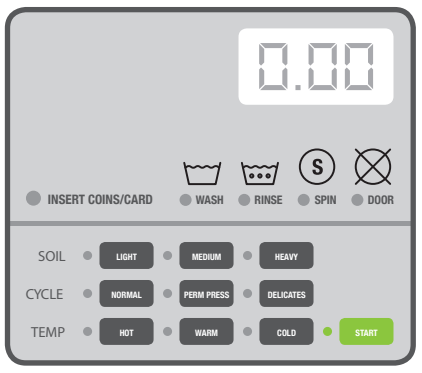

SOIL	LIGHT	Not very dirty!	MEDIUM	The usual kind of dirty!	HEAVY	Very dirty!
CYCLE	NORMAL	Spins very fast. Maximum water removal.	PERM PRESS	Spins medium fast. Items may take longer to dry!	DELICATES	Spins slowly and gently. Items may take longer to dry!
TEMP	HOT	Washes in HOT and rinses in COLD.	WARM	Washes in WARM and rinses in COLD.	COLD	Washes and rinses in COLD.

Check the tags on your clothes to see what settings best suits your clothes!

6.



PRESS START

IF YOU'RE HAVING TECHNICAL DIFFICULTIES, PLEASE CONTACT:

E: hello@ismartlaundrette.com.au P: 5975 9741